



**Planet Audio®**

 
[www.planetaudiousa.com](http://www.planetaudiousa.com)

**TELEPHONE**  
888.990.1236  
805.988.0215

**FAX**  
805.988.0275

**TECHNICAL SUPPORT**  
[www.planetaudiousa.com/support](http://www.planetaudiousa.com/support)

PI9758B 02.2011  
all specifications subject to change without notice  
© 2011 Planet Audio



# USER'S MANUAL



**Planet Audio®**

**PI9758B**

**Bluetooth®-Enabled  
In-Dash Motorized MultiMedia/MP3/CD AM/FM Receiver  
with 7-inch Widescreen Touchscreen TFT Monitor  
with Full iPod® Control  
with USB and SD Memory Ports and AV Input**

iPod is a trademark of Apple, Inc., registered in the U.S. and other countries.  
Planet Audio is not affiliated with Apple, Inc.

# Contents

*Thank you for buying this product.*

Please read through these operation instruments so you will know how to operate your model properly. After reading please keep this booklet in safe place for future reference.

## 1 Before You Start

Important Safeguards	4
About this manual	4
Precautions	5
Maintenance	6
Location & function of the controls	7
Remote control	9
Specifications	11

## 2 Installation

Wiring Connections	12
Install the Unit	13
Detach the Unit	15
Install the Front Panel	16
Detach the Front Panel	16
clean the connector	17

## 3 Common Operations

To Select Source by Menu	18
Reset the Unit	18
Turning the Unit On/Off	18
Volume Control	18
Setting the Sound Characteristics	18
EQ Setting	18
Turning Loudness On/Off	18
Insert a SD Card	19
Eject a Disc	19
Mute Function	19
Mode Selector	19
Infrared Sensor	19

## 4 Main Menu

Main Menu Setup	20
Video Adjust	20
Audio Adjust	20
Source Setup	21
System Adjust	21

## 5 DVD/VCD/MP4

DVD/VCD/MP4 Setup	25
DVD/VCD/MP4 Play	25
Selecting Tracks Fast	25
Number Buttons	25
Pause the Playback	25
Stop the Playback	25
Play tracks at Random	26
Repeat Playing	26
Skip backward/forward/F.F/F.REW the Playback	26
System Switch	26
Slow Motion Playback	26
Increase Picture Size	26
On Screen Display	26
Setting the Playback Time	27
Changing Audio Language	27
Changing the Subtitle Language	27
Changing the Viewing Angle	28
Selecting Channel	28
Program Playing	28
Playing PBC(Menu)	28
Selecting Menu	29
DVD Setup Menu	29

# Additional Information

Common Symptoms	Cause	Solution
There is no power.	The car ignition is switched off	If the powersupply is properly connected to the car accessory, switch the ignition key to ON or ACC.
	The fuse has blown.	Replace with same amperatge fuse rate.
The disc cannot be loaded.	There is another disc inside the player	Remove the disc from the player
The device doesnot work correctly (EJECT, LOAD, PLAY)	Inserted disc is upside down	Insert the compact disc with the label facing upward
	The surface of disc is extremely dirty, Scrached or damaged.	Clean the disc or try another disc, if the new disc works correctly, the first disc is damaged.
	Temperature inside the car is too high.	Cool off until the ambient temperature returns to normal.
There is no sound.	The volume control is set too low.	Turn up the volume properly.
	The device has not been wired correctly.	Check the connections according to the wiring diagram.
The operation keys do not work	1. The built-in microprocessor is not operating properly. 2. Front panel is not properly attached into its place	1. Switch the device off and on again or press the RESET button. 2. Remove and reinstall the front panel.
The sound of the disc player skips	The installation angle is more than 30 degrees	Adjust the installation angle to less than 30 degrees
	The surface of the road is uneven.	Wait until the road becomes smoother before playing the disc.
	The surface of disc is extremely dirty,scrached or damaged.	Clean the disc or try another disc, if the new disc works correctly, the first disc is damaged.
No radio reception.	The antenna cable is not connected.	Insert the antenna cable firmly into the antenna socket of the unit.
In automatic search mode the radio does not stop at a transmitting station.	The transmission signals are too weak.	Tune in to a radio station manually.

# Contents

## 6 CD/MP3/SD/USB

CD/MP3/SD/USB Setup 36  
 CD/MP3/SD/USB Play 36  
 Selecting Tracks Fast 36  
 Repeat Playing 37  
 Number Buttons 37  
 Selecting Track 37  
 Stop Play 37  
 Playing Tracks at Random 37  
 Pause the Playback 37  
 Skip backwafd/forward/F.F/F.REW the Playback 37  
 On Screen Display 38  
 Program Playing 38  
 Exit SD Card 38  
 Exit USB 38

## 7 Tuner

Listening to the Radio 39  
 Band Selector 39  
 Manual/Automatic Tuning 39  
 DX/LOC Selector 39  
 Selecting The stored Station 39  
 MO/ST Selector 40  
 Scanning/Memorizing Stations Automatically 40  
 On Screen Display 40  
 Goto FREQ 40  
 Number Buttons 40  
 RDS Setup 41  
 Alternative Frequencies 41  
 Traffic Alarm 41  
 Program Type 41

## 8 AUX

AUX Touch Screen Menu 42

## 9 Bluetooth Mode

Bluetooth Operational Interface 43  
 Using a Bluetooth Wireless connection 43  
 Pairing Your Unit and Bluetooth Phone 43  
 Pairing in Handsfree Mode 43  
 Cellphone Pairing Mode 44  
 Bluetooth Connection and Disconnection 44  
 Using the Unit as a Handsfree Device 44  
 Last Number Dialing 44  
 To Dial by Cellphone 44  
 To Dial by the Unit 45  
 Using the Unit as Bluetooth Music 45  
 Audio Transfer between The Unit and Phone 45

## 10 IPOD

IPOD Play 46  
 Selecting Tracks Fast 46  
 Playing Track F.F/F.REW 46  
 Switch 46  
 Repeat Playing 46  
 Playing Tracks at Random 46  
 Pause the Playback 46  
 File Selector 47  
 Video or Picture Mode 47  
 Eject IPOD 47

## 11 Additional Information

Simple Troubleshooting Guide 48

## IMPORTANT SAFEGUARDS About this manual

- 1 Be sure to connect the color coded leads according to the diagram. Incorrect connections may cause the unit to malfunction or damage the vehicle's electrical system.
- 2 Be sure to connect the speaker (-) leads to the speaker (-) terminal. Never connect the left and right channel speaker cables each other or to the vehicle body.
- 3 Make sure all the connections are completely correct before turning on your unit.
- 4 When replacing the fuse(s), the replacement must be of the same amperage as shown on the fuse holder.
- 5 Do not block vents or radiator panels. Blocking them will cause heat to build up inside and may result in fire.
- 6 To lest the driver distract his attention from, please install the unit in an apt place.
- 7 Using the unit after starting the engine, otherwise the unit can not be started, because the electric energy of battery was used up.
- 8 The unit must be screened from direct sunlight, or the electric energy of battery will be wasting for the high temperature.
- 9 Do not use the unit in extreme high temperature or such low temperature conditions, and also avoid humidity and direct sunlight.
- 10 Take care of the magnetism of the unit. Do no put the credit card, cassette or watch around the unit, or they would be broken or some information in them lose.
- 11 To lest disturb the video frequency, keep far away from the unit when using your phone.
- 12 Do not put the remote control under high temperature or where the sun strikes it, or else the control remote can not work normally.

This unit features a number of sophisticated functions ensuring superior operation. All the functions have been designed for the easiest possible use, but many are not self-explanatory. This manual will help you understand the functions and operations of the unit. This manual main explains **remote control operation**. However, in addition to those functions related with DVD/VCD/CD/MP3/MP4 operation that can only be operated by the remote control, there are also functions can be operated by the buttons provided for the main unit.

### WARNING!

**Do not watch or operate the video monitor while driving.** Doing so is unsafe and can distract the driver, which may cause an accident.

In some states or countries it is illegal for a driver to operate or view a video monitor while driving. It may also be illegal for a passenger to operate or view a video monitor in a moving vehicle even if the driver is not watching it.

Be sure that the installation and operation of this product is in compliance with local rules and regulations.

## File Selector

During IPOD mode, press **31** ROOT on the remote control to go back to the previous catalog.

Press **21** **⏮** to select the previous 5 tracks, press **⏭** to select the next 5 tracks (show as in the right of the picture).



### Note:

- \* Pressing **MENU** in the monitor or **⏮** / **⏭** also perform the same function.

## Video or Picture Mode

During IPOD mode, press **29** VIDEO to select video or audio. Video and picture can be played at this time.

The unit and the remote control can not be operated in this mode, you can just operate IPOD to select video and picture.

### Note:

- \* Pressing **VIDEO** in the monitor also perform the same function.
- \* The IPOD TV should be set ON in this function.
- \* Video playback requires Gen 5.5 or earlier Photo or Video iPod, iPod Touch, iPod Classic, and iPod Nano with video will only play music files.

## Eject IPOD

During IPOD mode, to take IPOD out, the main unit will switch to radio mode.

During other mode, to take IPOD out, the main unit will keep the original mode.



## IPOD play

During IPOD playback, connect the IPOD wire (5V) to the one in backside of main unit. The unit will play track in IPOD. If a IPOD is loaded, you can back to the source status, press IPOD to enter into IPOD setup:



- MENU** Back to the previous menu
- ◀◀** Briefly press to play previous track, press and hold to fast forward.
- ▶▶** Briefly press to play next track, press and hold to fast reward.
- ⏸** Play/ pause
- VIDEO** Mode switch between IPOD and main unit
- BT** Bluetooth setup
- SRC** Mode switch

## Selecting Tracks Fast

During IPOD playback, press **21** **◀◀** to play previous track, press **21** **▶▶** to play next track.

### Note:

- \* Pressing **◀◀** / **▶▶** in the monitor to perform the same function

## Playing Track F.F/F.REW

Press **20** **▶▶** or **◀◀** to play the track fast forward or fast rewind. Press it again or press ENTER to resume to play normally.

### Note:

- \* Pressing and holding **◀◀** / **▶▶** in the monitor to perform the same function

## Switch

During playback, press **VIDEO** to turn to IPOD, the screen shows: **Play video on your iPod. Then touch screen to return.** Then you can operate your iPod. Press **VIDEO** again to return to main unit operation.

### Note:

- \* It is only valid on the screen.

## Repeat Playing

During playback, press **15** **RPT** to track repeat, disc repeat, off. Press it again to cancel this function.

### Note:

- \* This function is operated by using the remote control only.

## Playing Tracks at Random

During IPOD playback, when pressing **16** **RDM** button, **Shuffle off**, **Shuffle Track**, **Shuffle Album** will be activated.

### Note:

- \* This function is operated by using the remote control only.

## Pause the Playback

During IPOD mode, press **27** **▶** button to pause the playback, press it again to return to normal playback.

### Note:

- \* Pressing **⏸** in the monitor also performs the same function.

# Before You Start

## PRECAUTIONS

This unit can play the following discs only:

Type of disc	Recorded material	Size of disc
DVD	Sound and moving pictures	12cm
VCD	Sound and moving pictures	12cm
CD	Sound only	12cm
MP3	Sound only	12cm
MPEG-4	Sound and moving pictures	12cm

**NOTE:** The unit is compatible with VCD1.0/1.1/2.0/3.0 version and DVCD disc.

- **Do not attempt to modify the unit, modifying the unit may cause an accident.**
- **Stop the vehicle before carrying out any operation that could interfere with your driving.**
- **Do not work in extremely high or low temperature. Be sure the temperature inside the vehicle is between +60° C and -10° C before turning on your unit.**
- **To enjoy optimum sound and images while playing, handle the discs as follows:**


——Do not use your CDs with paste residue or ink attached.



——Do not use CDs with labels or stickers attached, which may leave a sticky residue while beginning to peel off. (Shown as the picture)



——Clean the discs with an optional cleaning cloth. Wipe each disc from the center out. (Shown as the picture)

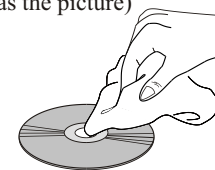

——Handle the disc by its edge to keep the disc clean, and do not touch the surface.



## Maintenance

### Replacing the Fuse

Make sure the amperage matches the specified value when replacing the fuses. If the fuse is blown, check the power connection and replace with a new one. If the same problem occurs, it would be subjected to the malfunction. In such cases, please consult to the nearest service dealer.


#### ⚠ Warning

Never use the fuse with the rated amperage more than that supplied to your unit, otherwise it will damage the unit.


### Replacing the Battery

When the range of the operation of the card remote control becomes short or no functions while operating. Replace the lithium battery with a new button cell (CR2025). Make sure the battery polarity before replace.


Gently pull out the Battery Holder while pressing the Stopper.

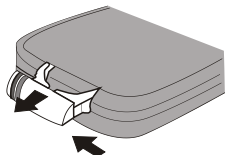

Put the button-type battery with mark(+) upward into the Battery Holder.

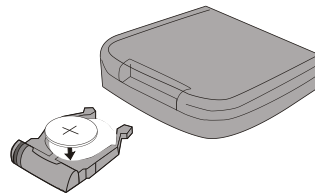

Insert the Battery Holder into the Remote Control.

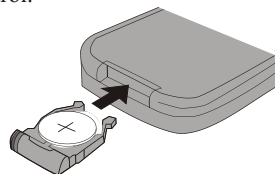

### Precautions on Using Lithium Battery

Always keep the lithium battery beyond children's reach. In case swallowed, see a doctor immediately.

Cleaning the battery with a dry cloth, to ensure its perfect connected.

Make sure the proper polarity when loading with the battery.

To prevent short circuit, do not use metal tweezers to clip the battery.

#### ⚠ Warning!

Improper handle with the battery may lead to explosion.  
It cannot be charged, disassembled or thrown into a fire.

### To Dial by the Unit

when cellphone is connected, press **23** to input the call number, then press **60** to dial, **DIAL OK** appears, when the call is pick up, and it appears **PICK UP**.

#### ■ Note:

- \* Press **22** CLEAR on the remote control or **8** in the monitor to delete wrong inputs.
- \* Press **↶** on the unit or **2** perform the same function.

### Using the Unit as Bluetooth Music

During bluetooth mode, the musics on the cellphone switch to the unit for play.

To select music fast: press **21** **⏮** to play the previous track, press **21** **⏭** to play the next one.

Pause play: press **17** **⏸** to pause play.

Stop play: press **18** **■** to stop play, and press the PLAY to play the current track again.

#### ■ Note:

- \* This function is only valid on remote control.

### Audio Transfer between the Unit and Phone

Press **6** to change the conversation from the unit to the cellphone.

#### ■ Note:



- \* The function will be cause to be disconnected bluetooth link for Nokia phones, but you do not worry just press **6** button while private conversation with Nokia phones, then switch back to the unit automatically.

# Bluetooth

## Cellphone Pairing Mode

1. Browse your cellphone menu and find the connectivity or Bluetooth connection section.
2. Select **search for** a new handsfree device function and allow the phone to find the **mobile**.  
(Different cellphone has different bluetooth menu, please refer to your phone manual.)
3. When CAR A/V DEVICE appear, select this item.  
( if it can not be connected, please refer to mobile manual, and connect it again.)
4. To input the password, the password is: 1234.
5. Press the connect with the Handsfree option on your cellphone, and **CONNECTED** appears.

## Bluetooth Connection and Disconnection

When established bluetooth connection between this unit and the cellphone, bluetooth icon  on the display appears in red. Press **29** PAIR to turn off bluetooth connection, and  appears in blue. Press **29** , **PAIRING SUCCESS** appear on the display, then display shows **CONNECTED** when bluetooth connected; display shows **PAIR TIME OUT**, when bluetooth disconnected.




### Note:

- \* Please keep the phone battery is full of power, or else the bluetooth connection will be disturbed.
  - \* To ensure connection succeed  
----Please delete menu of cellphone with bluetooth.
  - Please reset the unit and cellphone.
  - Please reset every step of pairing.
  - \* Disconnect after paring  
----Please pair the phone in manual.
- For example: pairing fixture → cellphone → connect.



- \* Pressing PAIR on the head unit or **5** in the monitor also performs the same function.
- \* Pressing **7** in the monitor to turn off the bluetooth function.

## Using the Unit as a Handsfree Device



When the unit is ringing, then it appears call from and the phone number ID\*\*\*\*\*  
\*\*\*\*\*on the dialing,

To accept call: Press **30**  to answer a call, it appears **PICK UP** on the display.  
To reject call: Press **31**  to reject a call, it appears **REJECT** on the display.  
To end call: Press  to end call, and **HANG UP** appears on the display.


### Note:

- \* Some of cellphones do not support reject call during bluetooth mode.
- \* Press  and  on the unit or **2** and **3** performs the same function.

## Last Number Dialing

Press **30**  button, it appears last call number on **4** , press  again, and then **PICK UP** appears on the display during conversation.

### Note:

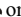- \* Press  on the unit or **2** perform the same function.
- \* To dial the number of the unit in the car only.


## To Dial by Cellphone

1. The unit activated automatically when you make a call by cellphone, and **DIAL OK** appears.
2. When you receive a call, **PICK UP** appears on the display.


# Before You Start

## Location of the Controls

### The Expanding

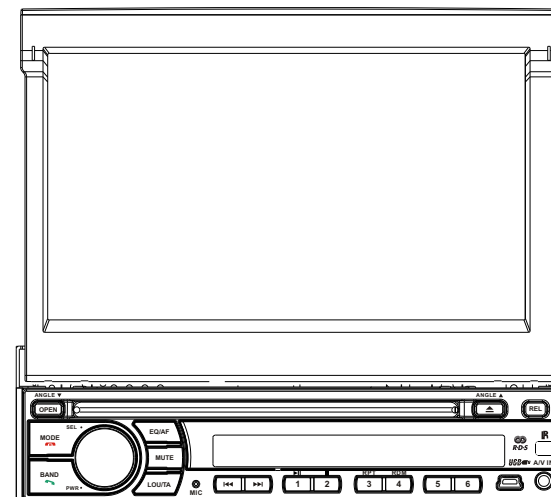


### The Whole

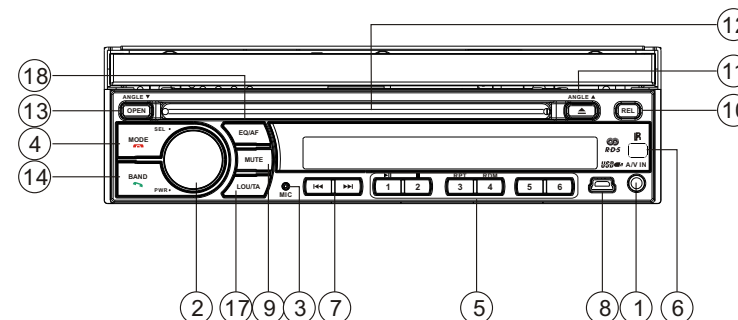

# Before You Start

## The Base

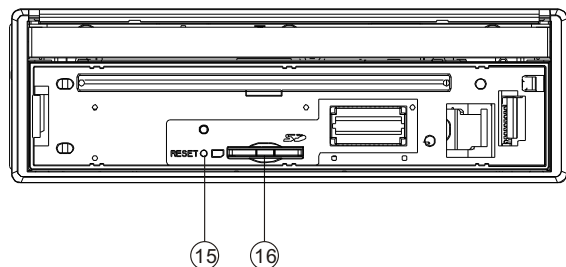


- ① A/V IN
- ② SEL/VOL (Power/Volume adjust/Setting of the sound characteristics) Button  
During the waiting mode, briefly press it to turn on the unit, press and hold it to turn off it. Rotate the button clockwise to increase the volume and anti-clockwise to decrease it.  
Briefly press it to set the sound characteristics and rotate it to set the terms.
- ③ MIC(for bluetooth)
- ④ MODE/ (Mode switch/hang up or refuse the call) Button  
Press it to switch the mode.  
During bluetooth mode, press it to hang up or refuse the call.
- ⑤ NUMBER Button/Pause/Stop/Repeat/RDM  
During radio mode, press it to select preset station.  
During playback, the functions of ►, ■, ◀, RPT, RDM can be opened.
- ⑥ REMOTE Infrared Sensor
- ⑦ ◀ / ▶ [Previous Track/Adjust frequency forward/ Next Track/Adjust frequency backward] Button
- ⑧ USB Socket
- ⑨ MUTE
- ⑩ REL (release the front panel) Button
- ⑪ ▲ Eject Button  
Press it to insert or eject a disc.
- ⑫ Disc Loading Slot
- ⑬ OPEN Button
- ⑭ BAND/ (band selector/the last call or answer the call) Button
- ⑮ RESET Button
- ⑯ SD Card Slot
- ⑰ LOUD/TA(loudness/traffic alarm) Button
- ⑱ EQ/AF(equalizer/alternative frequency)

# Bluetooth

## Bluetooth Operational Interface

Press 28 BT on the remote control or BT in the monitor to open the bluetooth operational interface:

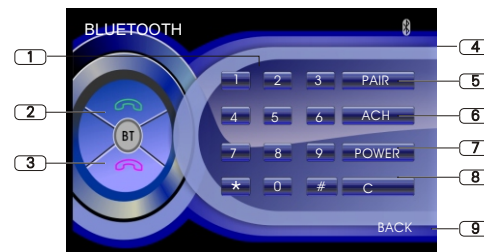

- ① **Number Buttons**  
To input the phone number.
- ② **Dial, last phone, answer a phone.**
- ③ **Hang up, refuse a phone.**
- ④ **Number Show**
- ⑤ **PAIR**
- ⑥ **ACH (audio change)**
- ⑦ **POWER**  
Press it to turn on or turn off the bluetooth function.
- ⑧ **C (clear)**
- ⑨ **BACK**

## Using a Bluetooth Wireless Connection

The device can be dialed wirelessly in bluetooth status. Before using the bluetooth function, please turn on your cellphone bluetooth function.

### Note:

- \* To provide the best sound without or little distorted sound(the cellphone or network brings).
- \* Full duplex conversation.
- \* Bluetooth ver2.0 compliant.
- \* Please dial-up the device before connecting bluetooth.

## Pairing Your Unit and Bluetooth Phone

The device supports handsfree profile, headset profile, A2DP( Audio Advanced Distribution profile)and AVRCP(Audio Video Remote Control profile). Follow the pairing instruction for the first time use, after that the unit will connect automatically.

## Pairing in Handsfree Mode

1. Press 29 PAIR, and **PAIRING** shows on the screen.
2. To get into **CELLPHONE CONNECTION** to search fixtures;
3. If the cellphone has connected, **PAIRING SUCCESS** appear and then **CONNECTED** in order, the light will from blue to red.


### Note:

- \* Pressing PAIR on the head unit or ⑤ in the monitor also performs the same function.




### AUX Touch Screen Menu

Press SRC to turn to AUXF SET:

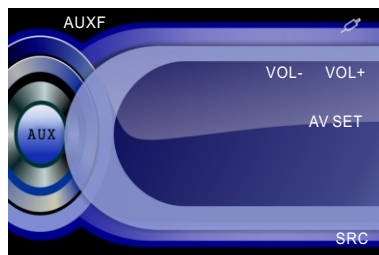

Press SRC again to turn to AUXR SET:

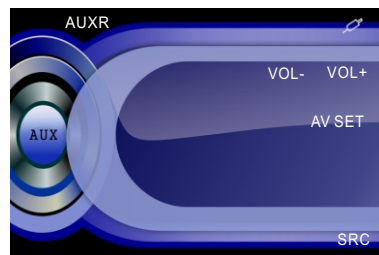

In AUX mode, select AV SET:




#### AV SET

For more details to adjust AUDIO, VIDEO and SYSTEM (Auto 1: PAL, NTSC, SECAM), (Auto 2: P-M, P-N). To adjust AUDIO and VIDEO please refer to pages 18 to 19.

- VOL- To decrease the volume
- VOL+ To increase the volume
- SRC Back to the source menu.

### Remote Control

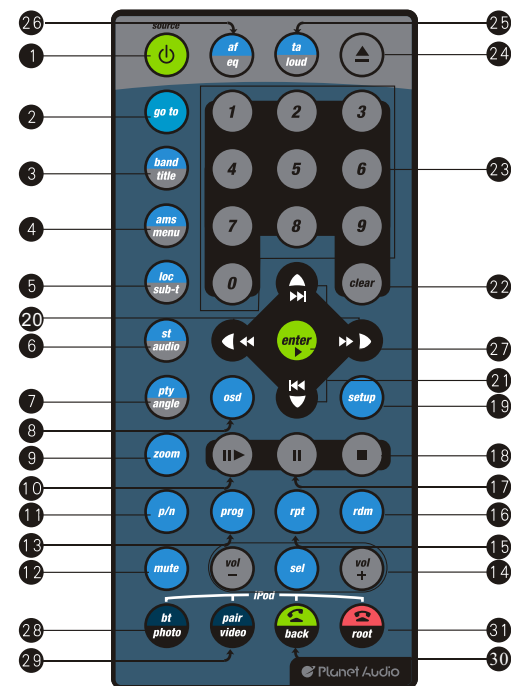


Tips:  
For more information as to replacing battery, please refer to **Replacing the Battery** on page 6.

# Before You Start

- 1 SOURCE/PWR
- 2 GOTO (playing time/track)
- 3 BAND/TITLE
- 4 AMS/MENU
- 5 LOC/SUB -T
- 6 ST/AUDIO (mono or stereo/language or channel selector)
- 7 PTY/ANGLE
- 8 OSD  
Briefly press it to show the current information, press and hold it to show the current setup.
- 9 ZOOM (zoom in or zoom out)
- 10 (Slow Forward/Rewind)
- 11 P/N( system adjusting)
- 12 Mute
- 13 PROG(Program playing)
- 14 VOL+/VOL-/SEL
- 15 RPT(Repeat Playing)
- 16 RDM (Playing Tracks at Random)
- 17 (Pause/Play)
- 18 (Stop Playing)
- 19 SETUP
- 20 (F.R/F.F)
- 21 (Previous/Next Track)
- 22 CLEAR
- 23 0~9 (Number) Buttons
- 24 (Eject Button)
- 25 TA/LOUD(traffic alarm/loudness)
- 26 AF/EQ (alternative frequency/equalizer) Button
- 27 (Left/Right/Up/Down ENTER)
- 28 BT (bluetooth mode) Button
- 29 PAIR/VIDEO  
During bluetooth, press to pair,  
During IPOD mode, press to enter into IPOD video mode.
- 30 / BACK  
During bluetooth, press to dial, dials again or answer a phone,  
During IPOD mode, press to back to previous mode.
- 31 /ROOT  
During bluetooth, press to hang up or refuse a phone,  
During IPOD mode, press to back to the root directory.

# Tuner

## RDS Setup

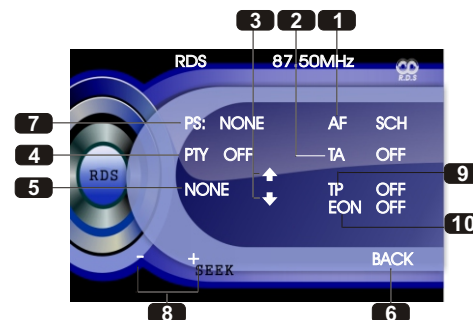

- 1 **AF**  
Press it to activate AF function.
- 2 **TA**  
Press it to activate TA function.
- 3   
Press it to select PTY CODE.
- 4 **PTY**  
Press it to activate PTY function.
- 5 During PTY ON, press this button to search the playing track's type.
- 6 **BACK**  
Press it to turn to listening to the radio.
- 7 **PS:**  
TO display the current RDS station's programs information.
- 8 **SEEK +/-**  
Press it to tune automatically.
- 9 **TP(Traffic Program)**  
It just shows the status, it can not be set. When it shows TP, there is no station playing.  
Traffic Program: when it shows TP ON, the traffic program is playing; and shows TP Search, it is searching the station which is playing traffic program.
- 10 **EON ON(Enhanced Other Networks information)**  
It just shows the status, it can not be set. When EON ON shows, it means when a station is playing traffic notice program, RDS will remind the user to search and listen to the station.

## Alternative Frequencies

Briefly pressing **26** AF to activate the auto searching station function. When AF is on, the RDS signal is weak or there is not, it will be found in the preset frequencies and the whole bands.

### Note:

- \* It is also performed by pressing **1** in the monitor or EQ/AF on the main unit.

## Traffic Alarm

Briefly pressing **25** TA to activate the traffic alarm function. When AF is on, there is **TA** displays on LCD, or else, if there is no TP information, the mode will search TP station automatically.

The **TA** is green when it is played by a station, if not, it is yellow.

When TA is playing, the volume will be adjusted to a TA level automatically. When in other modes (such as DVD, AUX), if a TA program is played, the mode will skip to the RDS status automatically. It will resume to the primary mode after the TA is over.

### Note:

- \* Briefly press LOU/TA on the head unit or **2** in the monitor performs the same function.
- \* When TA is off, there are no **TA** on LCD.

## Program Type

Briefly pressing **7** PTY to activate PTY function.

When PTY is on, **PTY ON** appears in the monitor, you can press **UP/DOWN** to select the program type, and then press PTY CODE to search the special program. And the monitor displays **PTY SEARCH**.

If PTY is off, **PTY OFF** appears in the monitor, the searching is stopped.

### Note:

- \* It is also performed by pressing **4** in the monitor.

## MO/ST Selector

During radio status, you can press **6 ST** button on the remote control to select **MONO** mode or **STEREO** mode.

Stereo reception is charged when “**STEREO**” appears.

It is switched to MONO mode when “**MONO**” appears.

### Note:

- \* It is only valid on remote control.
- \* Switch to MONO compulsively to improve the listening quality when weak signal.
- \* It is only valid in FM tuning.

## Scanning/Memorizing Stations Automatically

During radio status, briefly press **4 AMS** button on the remote control to scan each stored station 6 seconds respectively which stored in **23 Number Buttons** (from 1 to 6). You can press the corresponding Number Buttons or AMS button when your desired station is charged. And it starts playing that station.

When press and hold **4 AMS** button, it will activate automatically memory storing function. The radio automatically selects a station and has it stored in any one of the **23 Number Buttons (from 1 to 6)**.

### Note:

- \* The unit can be stored up to 6 stations for each band.
- \* It is only valid on remote control.

## On Screen Display

During radio status, press **8 OSD** to display the edition information.

## Goto FREQ

Press **2 GOTO**, and the monitor shows: FREQ, then press the Number to input the valid frequency, then the TV program will be played.

### Note:

- \* It is only valid on remote control.
- \* It is only valid when GOTO FREQ is on in main menu.

## Number Buttons

During radio status, press **Number Buttons** to receive the stored stations.

During radio status, **Number Buttons (from 1 to 6)** **23** can help you store your favorite station. You can follow the steps as below:

- 1 When receiving a station, press and hold any one of the **Number Buttons (from 1 to 6)** until the number appears on the **LCD**, which indicates that station is already stored in the corresponding number button.
- 2 Press and hold **4 AMS** button to receive stations automatically, and store them in 1 to 6 number respectively.
- 3 Press and hold another number button more than 2 seconds when listening in a station in one number button's, the station will be stored in that number button.

### Note:

- \* Press **35** in the monitor performs the same function.

## Specifications

### General

Power Requirement	14.4V DC (11-16V allowable)
Load Impedance	4Ω
Max.Power Output	85W x 4
Tone Controls	±7dB Bass 100Hz Treble 10KHz
Dimensions	Approx.197x178 x 50 mm (d/w/h)
Weight	Approx.2.7kg

### FM Section

Tuning Range (Optional)	87.5-108(MHz) (Europe) 87.5-107.9(MHz) (U.S.A.)
IF Range	10.7MHz
Usable Sensitivity (-30dB)	10dBuV
Signal-to-noise Ratio	50dB
Stereo Separation	30dB (1KHz)
Frequency Response	40Hz-12KHz

### AM Tuner Section

Frequency Range (Optional)	522-1620(KHz) (Europe) 530-1710(KHz) (U.S.A.)
IF Range	450KHz
Usable Sensitivity (-20dB)	32dBuV

### VCD/CD Player Section

VCD Signal System	AUTO/PAL/NTSC
Signal-to-noise Ratio	60dB
Separation	55dB(1KHz)
Distortion	0.3%


### DVD Player Section

DVD Signal System	AUTO/PAL/NTSC
Channels	2
Frequency Response	40Hz to 16KHz
Signal-to-noise Ratio	60dB
Separation	60dB


### Note:

**Due to continuous product improvement, specifications and design are subject to change without prior notice.**

## Wiring Connection

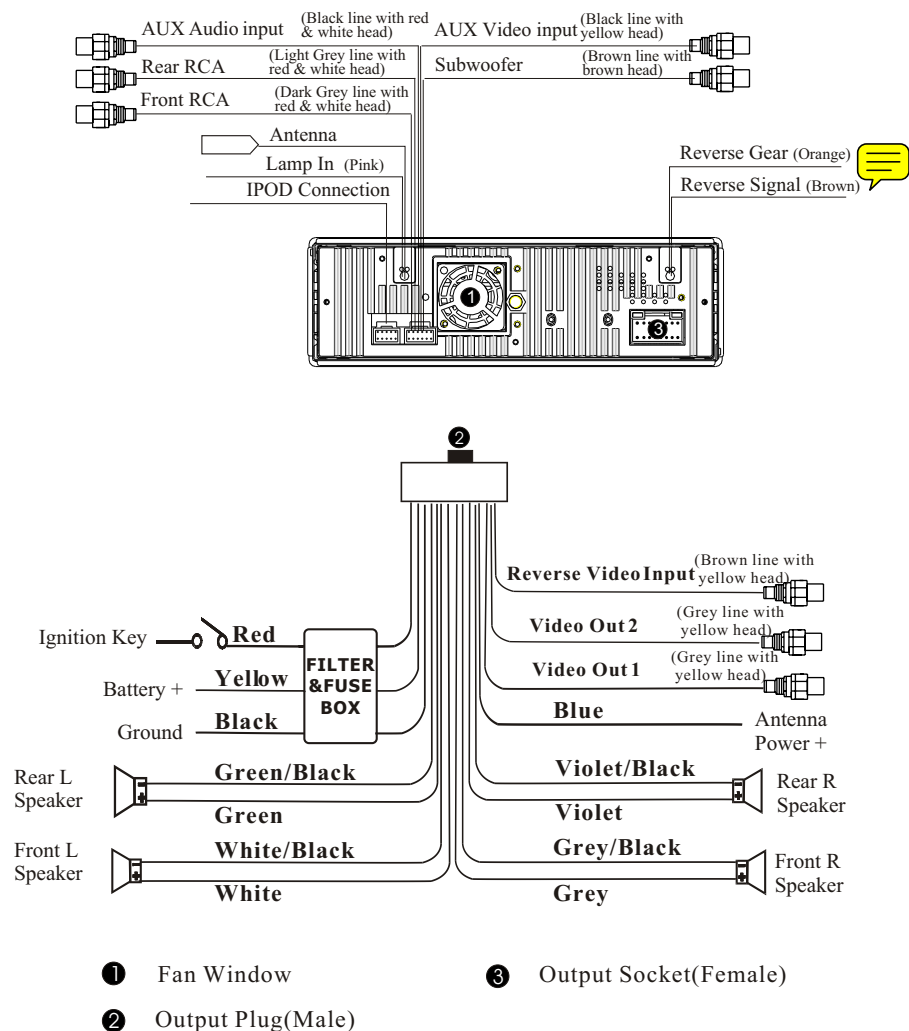


## Listening to the radio

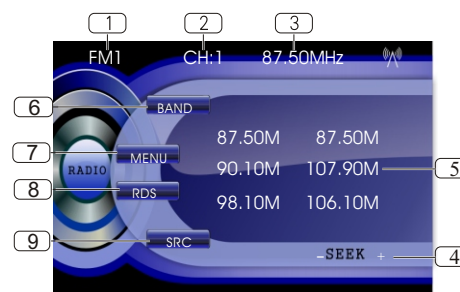

- 1 **Band Indicator**  
Shows which band the radio is tuned to.
- 2 **Preset Number Indicator**  
Shows what preset has been selected.
- 3 **Frequency Indicator**  
Shows which frequency the tuner is tuned.
- 4 **SEEK+/SEEK-**  
Briefly press to tune by the presettable range, hold and press to tune automatically.
- 5 **The 6 stations of the current band.**  
Briefly press to select station, hold and press to save the current station to one of the 6 stations.
- 6 **BAND**  
To select the bands.
- 7 **MENU**  
Press to SYSTEM setup.
- 8 **RDS**  
Press to RDS setup.
- 9 **SRC**  
Press this button to select the signal source.

## Band Selector

 During radio status, repeatedly press 3 BAND button to select bands in the following order:



### Note:

- \* Press BAND on the head unit or 6 in the monitor performs the same function.

## Manual/Automatic Tuning

**Manual Tuning:** Briefly press 20 (▶ or ◀) button on the remote control to select the different band.

**Automatic Tuning:** Press and hold 20 (▶ or ◀) button the radio automatically searches a station downward or upward respectively and plays when it finds a station.

### Note:

- \* Press 4 in the monitor or ◀ / ▶ on the main unit also performs the same function.

## DX/LOC Selector

During radio status, press 5 LOC button to select strong or weak station reception. "LOC ON" appears on the display and only local station is available. when it disappears both distance and local stations can be received.

### Note:

- \* The function is only valid on remote control.
- \* The function is invalid in AM tuning.

## Selecting the Stored Station

 
During radio status, press 27 ▲ button to select the stored station upward, press ▼ to select the stored station downward.

### Note:

- \* The function is only valid on remote control.

### On Screen Display

During **CD** status, press **OSD** button the display shows:



**Note:**

- \* This function is operated by using the remote control.

### Program Playing

During CD mode, press **13** **PROG**, the TFT displays the program menu. Press **NUMBER BUTTONS** to select the track Number and then press **27** to move the cursor to **START**, press **ENTER** to start program playing; move the cursor to EXIT and press ENTER to exit the program playing. Move the cursor to **⏮** and press ENTER to the previous page; move the cursor to **⏭** and press ENTER to the next page. During this process, press **18** **■** to cancel the program playing.

**Note:**

- \* The function is only valid on remote control.
- \* Press **22** **CLEAR** to clear the mistake input.

### Eject SD Card

Push SD card to exit it.

During SD playing mode, to exit SD card to switch to Disc mode; if there is no disc in the head unit, it will switch to USB mode, or else, it will switch to Radio mode. During other modes, to exit SD card to keep the previous mode.


### Eject USB

Pull USB to exit it.


During USB playing mode, to exit USB to switch to Disc mode; if there is no disc in the head unit, it will switch to SD Card mode, or else, it will switch to Radio mode. During other modes, to exit USB to keep the previous mode.

## Install the Unit

### Main Parts List

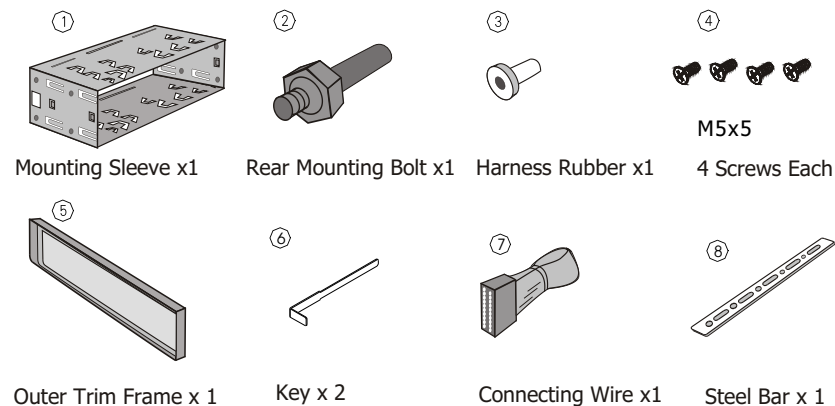

### Installation Method ①: DIN Front-Mount

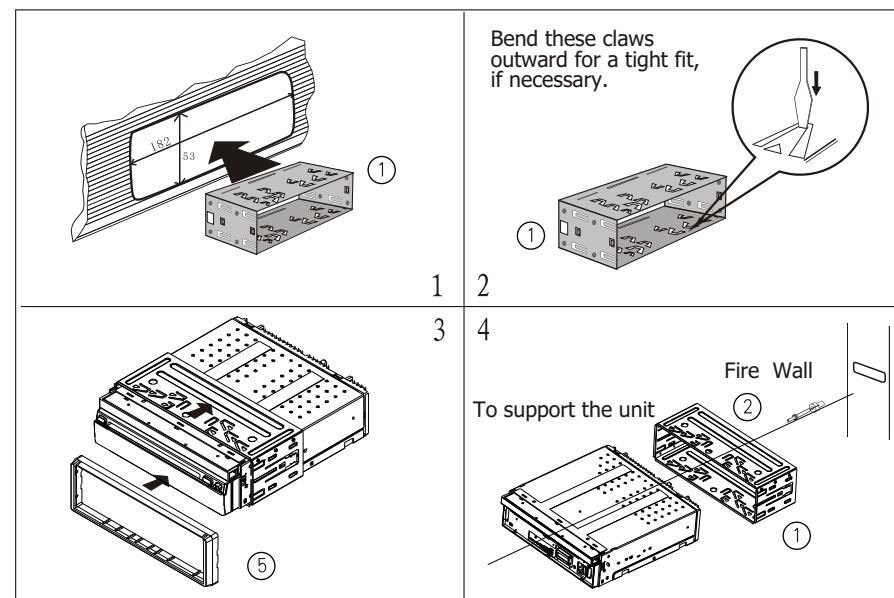




## Install the Unit

### Installation Method

#### Installation using the screw holes at the sides of the unit.

Select a position where the screw holes of the mounting bracket supplied with the car and the screw holes of the main unit become aligned (are fitted), and tighten the screws (see ④ at 2 places on each side). And then fasten them to the car.

- Note:
- Outer Trim Frame ⑤ and Mounting Sleeve ① are not used for installation method.

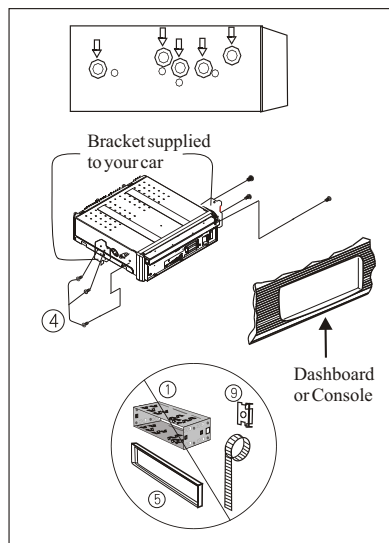

### Repeat Playing

During CD/MP3/SD/USB playback, press **15 RPT** to replay the current track, press it again to cancel this function.

■ Note:

- \* Pressing ⑤ RPT on the main unit also performs the same function.
- \* The default setting is Disc Repeat.

### Number Buttons

Press one of **23 Number Buttons(0~9)** to select a track to play automatically.

■ Note:

- \* Press track region and the screen shows the number keys, touch the number to select tracks.
- \* Press **22 CLEAR** to clear the mistake input.

### Selecting Track

During CD playback, first press **2 GOTO**, and TFT shows : *disc go to:--*-.press your desired time of the playback by using number buttons.

Second press GOTO button, *track go to:--* appears on TFT, also input your desired numbers to play the current time of your selection.

During MP3/SD/USB mode, first press **2 GOTO** and the TFT shows:---. Then press NUMBER BUTTONS to input the MP3/SD track's Number to play it; secondly press **GOTO** button, and the TFT shows : --:-- , now input the desired time to play the current track at this point.

■ Note:

- \* This function is operated by using the remote control.
- \* Press **22 CLEAR** to clear the mistake input.

### Stop Play

During CD/MP3/SD/USB playback, Press **18 ■** to stop the playback.

■ Note:

- \* Press **■** in the monitor perform the same function.

### Playing Tracks at Random

During CD/MP3/SD/USB playback, press **16 RDM** button on the remote control to play any track at random under the directory which you select. Press it again to return to normal playing.

■ Note:

- \* This function is operated by using the remote control.

### Pause the Playback

 
During CD/MP3/SD/USB playback, Press **17 II** to switch between play and pause.

■ Note:

- \* Press **II** in the monitor or **II** on the head unit performs the same function.

### Skip backward/forward/F.F /F.REW the playback

Press **20 (◀ or ▶)** on remote control to perform fast reward or fast forward.




■ Note:



- \* Press and hold **◀ / ▶** on the head unit also performs the same function.

## CD/MP3/SD/USB Setup

During CD playback, touch the screen shows the following menu:

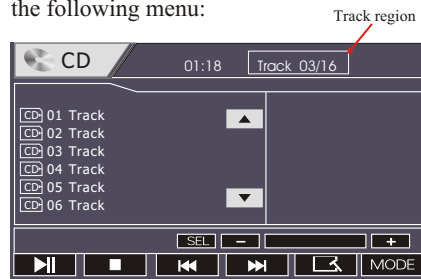

 During MP3/SD/USB playback, touch the screen shows the following menu:

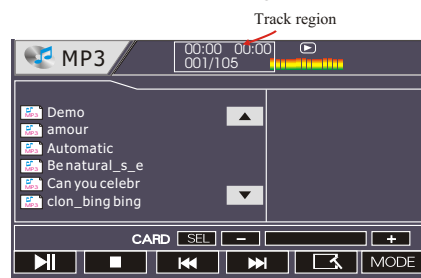

Scan the tracks

**CARD** To show SD card or USB

**SEL** Sound characteristics

**-** Decrease volume level, adjust some items

**+** Increase volume level, adjust some items

**Play/pause**

**Stop**

**Previous track**

**Next track**

**DVD setup menu**

**MODE** Mode selector

**Track Region:** Press this region and the screen shows the following menu: number keys appears, touch the number to select tracks. Touch the "X" to exit this menu.



## CD/MP3/SD/USB Play

Insert a CD/MP3 disc into the slot, the unit will play automatically.

Take away the rubber plug ⑧ USB or ⑩ SD card, then insert USB or SD card which will be played automatically.

If there have be loaded a disc/USB/SD card, press SOURCE to switch to play, or back to play source to select menu, press DVD to play.

### Note:

- \* Press **MODE** on the head unit to switch to DVD mode. When SD card and USB were inserted into, press this key again and again to switch among SD card, USB and disc.
- \* Press **MODE** in the monitor to turn to mode switch.
- \* At present, our products can only support up to 16G of SD or USB.

## Selecting Tracks Fast

During MP3/SD/USB playback, press ② ⏮ to play previous track, press ② ⏭ to play next track.

During CD playback, first press ② ⏮ to return to the beginning of the current track, press ② ⏮ again within 3 seconds to play previous track, press ② ⏭ to play next track.



### Note:

- \* Press ⑦ ⏮ / ⏭ button on the head unit or ⏮ and ⏭ in the monitor perform the same function.
- \* In CD/MP3/SD/USB mode, you can press track's Number or name to play.

## Detach the Unit

Detach the front panel at first. For more details, please refer to *detach the front panel*.

1. After the front panel was detached, remove the outer trim frame.

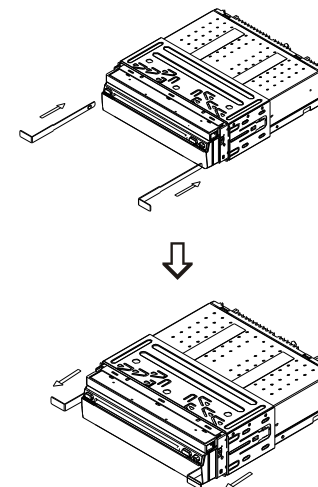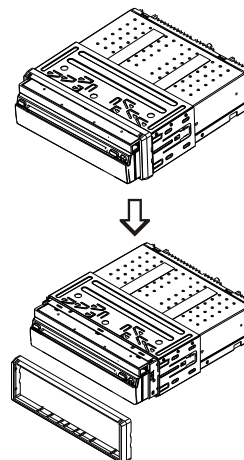


2. Put the keys into the host on both sides of the unit and hold the keys to the mount direction, then push the two sides outward, and pull them out. (As shown) .

# Installation


## Install the Front Panel

Put notch ① (shown as picture) onto shaft ②. And then slightly press into the right side.

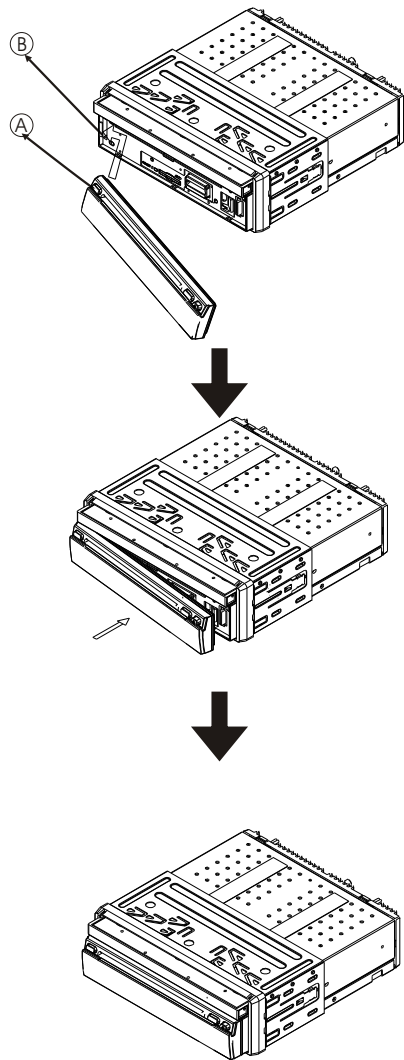

## Detach the Front Panel

Press REL button in the upper right corner, and then the front panel will be folded down.

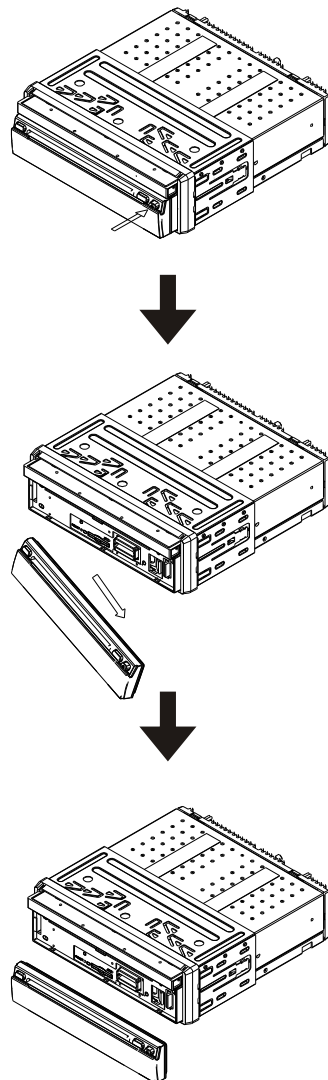

# DVD/VCD/MP4

## ---Preferences page---

### Default

Example showing how to set load factory setting:

(Press ▲ or ▼)

--Preference Page--

TV Type	Auto
Audio	Eng
Subtitles	Eng
DVD Menu	Eng
Parental	
Change PSW	
Default	

Go to language page

(Press ►, ▲ or ▼, then press ENTER)

--Preference Page--

TV Type	Auto
Audio	Eng
Subtitles	Eng
DVD Menu	Eng
Parental	
Change PSW	
Default	Reset

Reset to the factory settings

## ---Preferences page---

**DVD Menu**

Example showing how to set Disc Menu Language:

(Press ▲ or ▼)

--Preference Page--

TV Type	Auto
Audio	Eng
Subtitles	Eng
DVD Menu	Eng
Parental	
Change PSW	
Default	

Go to language page



(Press ►, ▲ or ▼, then press ENTER)



--Preference Page--

TV Type	Auto	English
Audio	Eng	French
Subtitles	Eng	Spanish
DVD Menu	Eng	Chinese
Parental		Japanese
Change PSW		Korean
Default		Russian
		Thai

Set the DVD menu language

**Clean the connector**

If the connector of the unit and the front panel is dirty, the unit may not work normally. To avoid this situation, detach the front panel and clean it with a cotton swab dipped in alcohol. Do not use excessive force or the connector will be damaged.

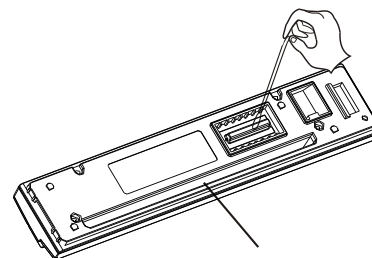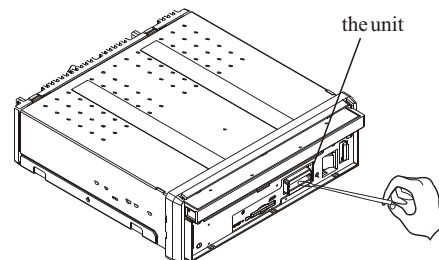

The back of the panel

**Note:**

- \* For safety, before cleaning the connector, close the wage machine and remove the key from the ignition switch. Do not contact your fingers or any metal device with the connector.

**Parental**

Example showing how to set parental control:

(Press ▲ or ▼)

--Preference Page--

TV Type	Auto
Audio	Eng
Subtitles	Eng
DVD Menu	Eng
Parental	
Change PSW	
Default	

Go to language page



(Press ►, ▲ or ▼, then press ENTER)

--Preference Page--

TV Type	Auto	2 G ▲
Audio	Eng	3 PG
Subtitles	Eng	4 PG 13
DVD Menu	Eng	5 PGR
Parental		6 R
Change PSW		7 NC 17
Default		8 Adult
		Off

Set parental control

**Change PSW**

Example showing how to set password, and the default password is 8888.

(Press ▲ or ▼)

--Preference Page--

TV Type	Auto
Audio	Eng
Subtitles	Eng
DVD Menu	Eng
Parental	
Change PSW	
Default	

Go to language page



(Press ►, ▲ or ▼, then press ENTER)


--Preference Page--


TV Type	Auto	
Audio	Eng	
Subtitles	Eng	
DVD Menu	Eng	
Parental		
Change PSW		Change
Default		

Change the password

# Common Operations

## To Select Source by Menu

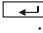In any mode(except for DVD, SD, USB mode), press SRC, BACK/  in the monitor, the following menu will appear:

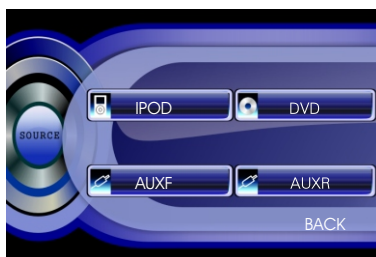

Press it to select your desired item, and press SET to enter into the main menu.

If you want to navigation, press NAVI; if it did not enter into, that means the unit does not include the function.

In any mode, press BACK to return to the previous mode.

### Note:

- \* If the font display in red, that means this function is null.

## Reset the Unit

Operating the unit for the first time or after replacing the car battery, you must reset the unit.

Release the front panel at first, and then Press **⑤ RESET** button in the panel with a pointed object, (such as a ballpoint pen) to set the unit to initial status.

### Note:

- \* When some errors occur on the display, you can also press **RESET** button to resume to normal, and it will erase the clock setting and some memorized functions.
- \* This function can only be operated by the head unit.

## Turning the Unit On/Off

Briefly press **① PWR** button to turn on the unit, press it again, the unit is still in the waiting status. Press and hold to turn off.

### Note:

- \* Pressing PWR button on the head unit also performs the same function.

## Volume Control

 
Press **⑭ VOL+** button to increase the sound level and press **⑭ VOL-** button to decrease the sound level.

### Note:

- \* Rotating **②** on the head unit also performs the same function.

## Setting the Sound Characteristics

Repeatedly briefly press **⑭ SEL** button to select the desired mode in the following order:



After selecting the desired mode, you can adjust the current level by pressing **⑭ VOL** buttons.

### Note:

- \* Briefly press and rotating **②** button on the head unit also performs the same function.
- \* During CD/MP3 mode, press SEL/-/+ to performs the same function.

# DVD/VCD/MP4

## ---Preference page---

### TVType

Example showing how to set TV type:

(Press ▲ or ▼ )

--Preference Page--

TVType	Auto
Audio	Eng
Subtitles	Eng
DVD Menu	Eng
Parental	
Change PSW	
Default	

Go to language page

(Press ►, ▲ or ▼, then press ENTER)

--Preference Page--

TVType	Auto	PAL
Audio	Eng	Auto
Subtitles	Eng	NTSC
DVD Menu	Eng	
Parental		
Change PSW		
Default		

Select the TV system

### Audio

Example showing how to set Audio language:

(Press ▲ or ▼ )

--Preference Page--

TVType	Auto
Audio	Eng
Subtitles	Eng
DVD Menu	Eng
Parental	
Change PSW	
Default	

Go to language page

(Press ►, ▲ or ▼, then press ENTER)

--Preference Page--

TVType	Auto	English
Audio	Eng	French
Subtitles	Eng	Spanish
DVD Menu	Eng	Chinese
Parental		Japanese
Change PSW		Korean
Default		Russian
		Thai

Set the audio Language

### Subtitles

Example showing how to set subtitle language:

(Press ▲ or ▼ )

--Preference Page--

TVType	Auto
Audio	Eng
Subtitles	Eng
DVD Menu	Eng
Parental	
Change PSW	
Default	

Go to language page

(Press ►, ▲ or ▼, then press ENTER)

--Preference Page--

TVType	Auto	English
Audio	Eng	French
Subtitles	Eng	Spanish
DVD Menu	Eng	Chinese
Parental		Japanese
Change PSW		Korean
Default		Russian
		Thai

Set the subtitles Language



**--Dual mono/DRC Setup--****Dual Mono**

Example showing how to set stereo mode:

(Press ▲ or ▼)

--Dual mono/DRC Setup--

Dual Mono  
Dynamic

Dual mono/DRC setup

(Press ►, ▲ or ▼, then press ENTER)

--Dual mono/DRC Setup--

Dual Mono  
Dynamic  
Stereo  
L-Mono  
R-Mono  
Mix-Mono

Dual Mono Setup

**Dynamic**

Example showing how to set dynamic range compression:

(Press ▲ or ▼)

--Dual mono/DRC Setup--

Dual Mono  
Dynamic

Dual mono/DRC setup

(Press ►, ▲ or ▼, then press ENTER)

--Dual mono/DRC Setup--

 
Dual Mono  
Dynamic  
FULL  
3/4  
1/2  
1/4  
OFF

Deactivate DRC

**EQ Setting**

While listening to the popular music, classic music or rock music, you can select the corresponding preset modes to adjust the sound quality perfectly by using **EQ** button.

Press and hold **EQ** button to choose the following modes in turn:



The default setting is OFF.

**Note:**

- \* Pressing **EQ/AF** also performs the same function.

**Turning Loudness On/Off**

Press and hold **LOUD** button activate LOUD function. You can press this button to increase the low frequency, which can improve sensitivity for your ears. Pressing it again to quit this function.

**Note:**

- \* Pressing **LOU/TA** also performs the same function.

**Insert a SD Card**

Common SD Card: insert a common SD card into **SD** slot and the programs in the card will be played.

**Eject a Disc**

Press **EJECT** button to eject or insert a disc.

**Note:**

- \* Press **EJECT** on the remote control also performs the same function.

**Mute Function**

Press **MUTE** button to shut off the sound output. And “**MUTE**” appears on the LCD. Press it again to resume to previous volume level.

**Note:**

- \* Briefly pressing **MUTE** on the head unit also performs the same function.

**Mode Selector**

Repeatedly briefly pressing **SOURCE** button to select the different modes available.


**Note:**

- \* Briefly pressing **MODE** on the head unit also performs the same function.

**Infrared Sensor:**

Receptor **IR** on the head unit for the card remote control.

## Set up Main Menu

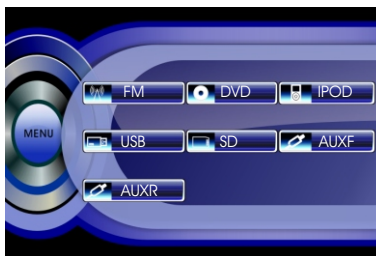


Press MENU in the above menu to recall the following menu:  
Hold and press SETUP on the remote control or briefly press MENU on the main unit to enter the menu as follows:



This menu includes AUDIO, VIDEO, SOURCE, SYSTEM, EXIT. Press them in the monitor to set the desired status.

### 1.Video Adjust


After selecting VIDEO, the sub menu will appear as follows:

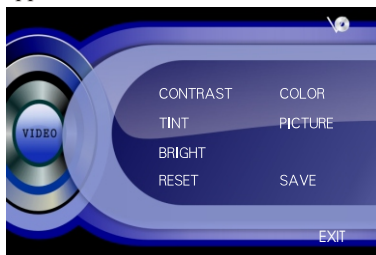

In this menu you can adjust CONTRAST, COLOR, TINT, PICTURE, BRIGHT, EXIT.

### Picture Adjust

Press PICTURE in this menu, it will appear as follows:

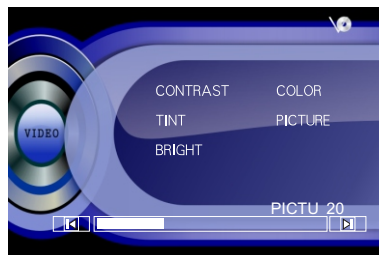


Press or to adjust the size, then press SAVE to save the setup, press EXIT to exit this menu.

#### Note:

\* Adjusting the other options perform the same operation.

### 2.Audio Adjust

After selecting AUDIO, the sub menu will appear as follows:

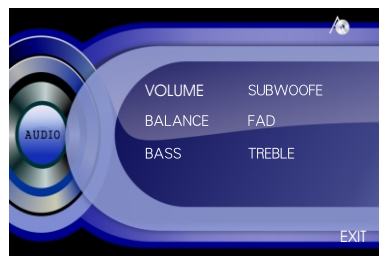

You can adjust VOLUME, SUBWOOFER, BALANCE, FAD, BASS, TREBLE. For example, press FAD, the setting menu will appear as follows:

## --General Setup Page--

### Captions

Example showing how to set captions on/off:

(Press or )

--General Setup Page--	
TV shape	Wide
Angle Mark	On
OSD Language	Eng
Captions	Off
Screen Saver	On

Go To General Setup Page



(Press , or , then press ENTER)

--General Setup Page--	
TV shape	Wide
Angle Mark	On
OSD Language	Eng
Captions	Off
Screen Saver	On

Closed Captions

### Screen Saver

Example showing how to set Screen Saver on/off:

(Press or )

--General Setup Page--	
TV shape	Wide
Angle Mark	On
OSD Language	Eng
Captions	Off
Screen Saver	On

Go To General Setup Page



(Press , or , then press ENTER)

--General Setup Page--	
TV shape	Wide
Angle Mark	On
OSD Language	Eng
Captions	Off
Screen Saver	On

Set the Screen Saver

## --General Setup Page--

### TV Display

Example showing how to set TV Display mode:

(Press ▲ or ▼)

--General Setup Page--

TV shape	Wide
Angle Mark	On
OSD Language	Eng
Captions	Off
Screen Saver	On

Go To General Setup Page

(Press ►, ▲ or ▼, then press ENTER)

--General Setup Page--

TV shape	Wide	Normal/PS4/3
Angle Mark	On	Normal/LB4/3
OSD Language	Eng	Wide16:9
Captions	Off	
Screen Saver	On	

Set the TV shape

### Angle Mark

Example showing how to set picture mode:

(Press ▲ or ▼)

--General Setup Page--

TV shape	Wide
Angle Mark	On
OSD Language	Eng
Captions	Off
Screen Saver	On

Go To General Setup Page

(Press ►, ▲ or ▼, then press ENTER)

--General Setup Page--

TV shape	Wide	
Angle Mark	On	On
OSD Language	Eng	Off
Captions	Off	
Screen Saver	On	

Set the multi-angle display

### OSD Lang

Example showing how to set language mode:

(Press ▲ or ▼)

--General Setup Page--

TV shape	Wide
Angle Mark	On
OSD Language	Eng
Captions	Off
Screen Saver	On


Go To General Setup Page

(Press ►, ▲ or ▼, then press ENTER)

--General Setup Page--

TV shape	Wide	English
Angle Mark	On	French
OSD Language	Eng	German
Captions	Off	Spanish
Screen Saver	On	Italian
		Dutch
		Portuguese

Set the OSD Language

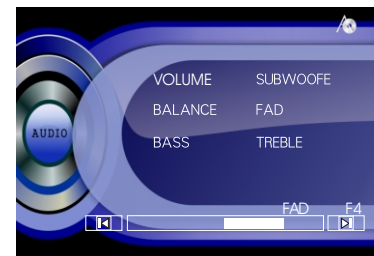

Press ◀ or ▶ to adjust the desired FAD level, press EXIT to exit this menu.

#### ▣ Note:

\* Adjusting the other options perform the same operation.

## 3.Source Adjust

In the main menu, press SOURCE in the monitor, the sub menu will appear as follows:




You can adjust above items to ON or OFF, press the corresponding button to set. If one of them was set OFF, that function is null. For example, to set the TV OFF, press SOURCE can not activate TV function. But can not set the current playback OFF.

#### ▣ Note:

\* If the item can not be set "ON", then this model does not contain this function.

## 4.System Adjust

After selecting SYSTEM, the sub menu will appear as follows:

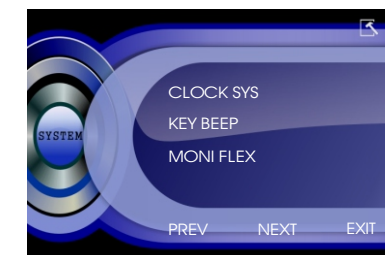


In this menu you can adjust CLOCK SYSTEM, KEY BEEP, MONITOR FLEX and so on.

### ⚙ Clock System




Press CLOCK SYSTEM in the monitor to set 12 HOUR or 24 HOUR in this menu.

### ⚙ Key Beep

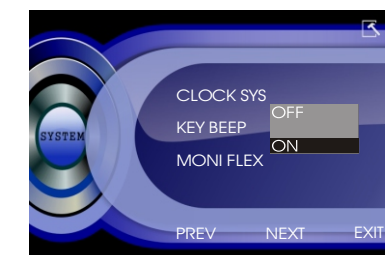

In this menu you can adjust KEY BEEP, press it in the monitor and select ON or OFF, the default setting is ON, it means when you press the keys, they can sound.

### Monitor Flex

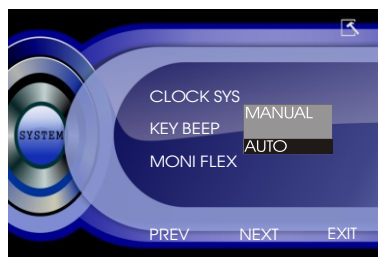


In this menu you can adjust MONITOR FLEX, press it in the monitor and select MANUAL or AUTO, the default setting is AUTO, it means the monitor will flex automatically.

### Next Setup

Press  $\downarrow$  to display the menu follows, press  $\uparrow$  to display the previous one.



### Reverse Pola

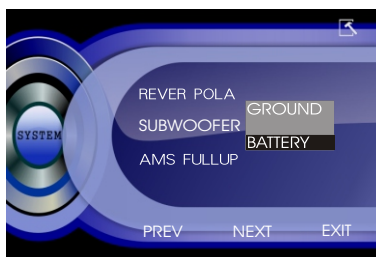


Setting REVERSE POLA in this menu. The signal is +12V when you back a car, please press BATTERY in the monitor; if the signal is 0V, please press GROUND.

### Subwoofer



In this menu you can adjust SUBWOOFER, press it in the monitor and select ON or OFF, the default setting is ON.

### AMS Fullup

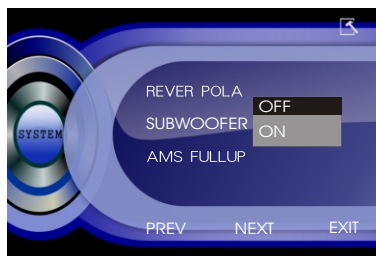

In this menu to set the modes of AMS. When the setup is ON, the presettable stations are full, no new's is allowed. When you select OFF, it will searching continually.

Press  $\downarrow$  to display the menu follows, press  $\uparrow$  to display the previous one.



### Selecting MENU

- 1 Selecting Menu: During DVD status, press **4 MENU** to return to the root menu, all of the chapters will appear on monitor. You can press **27** or **23** button to select your desired chapter.
- 2 Selecting Title: During DVD status, press **3 TITLE** to return the title menu, all of the titles will appear on monitor. You also can press **27** or **23** button to select your desired chapter.

#### Note:

- \* Under DVD menu, touch the screen to select items.
- \* If the touch menu options invalid or the disc does not support touch-TITLE,  $\cdot\cdot\cdot$  that is the same as **27** buttons on the remote control will display on the screen. Press  $\blacktriangleleft$  to left, press  $\blacktriangleright$  to right, press  $\blacktriangleup$  to up, press  $\blacktriangledown$  to down and press  $\bullet$  to ENTER.

### DVD SETUP MENU

Press **19 SETUP** on remote control or **MENU** on the main unit or **[MENU]** in the monitor, main menu and sub-menu will appear on TFT, pressing **27** [ $\blacktriangle$ ] [ $\blacktriangledown$ ] [ $\blacktriangleright$ ] [ $\blacktriangleleft$ ] on the remote control to select your desired items, then press ENTER.

Press  $\blacktriangleup$  to the pervious one, press SETUP or press [ $\blacktriangle$ ] [ $\blacktriangledown$ ] [ $\blacktriangleright$ ] [ $\blacktriangleleft$ ] to move the cursor on "X", then press ENTER to exit the menu setup.

#### Notes:

- \* The selections are the preferred options that will be chosen if they are available on a disc. If the disc that is inserted does not have the preferred option then the discs own preference will be used.
- \* Regarding **SETUP MENU**, please refer to the following pages for more details.
- \* Some functions varies depending on the types of models or formats of the disc.
- \* To touch the screen to select menu, touch it again to select the item.

## Changing the viewing angle (Multi-angle)

With DVDs featuring multi-angle (scenes shot from multiple angles) recordings, you can press **7 ANGLE** to switch among viewing angles during playback.

Selection options switch as follows:

**ANGLE 1 — ANGLE 2 — ANGLE 3.....**

### Notes:

- \* This function is operated by using the remote control.
- \* This function only operates with DVDs featuring multi-angle recordings.
- \* The "1/2" mark on a DVD's package indicates it features multi-angle scenes. The number in the "1/2" mark indicates the number of angles from which scenes were shot.
- \* It is invalid to pressing ANGLE during fast forward/fast reverse or pause.

## Selecting Channel

During VCD status, repeatedly press **6 AUDIO** button to select the following channel:



Selecting the corresponding channel to set the different sound characters.

### Note:

- \* This function is operated by using the remote control only.

## Program Playing

During VCD mode, press **15 PROG**, the TFT displays the program menu. Press **NUMBER BUTTONS** to select the track Number and then press **27** to move the cursor to **START**, press **ENTER** to start program playing; move the cursor to **EXIT** and press **ENTER** to exit the program playing. Move the cursor to **◀** and press **ENTER** to the previous page; move the cursor to **▶** and press **ENTER** to the next page. During this process, press **18 ■** to cancel the program playing.

### Note:

- \* The function is only valid on remote control.
- \* Press **22 CLEAR** to clear the mistake input.

## Playing PBC (Menu)

During VCD status, first press **3 TITLE**, PBC playback starts and the menu of entire disc appears on the monitor, and then you can select your favorite track by using **23 Number Buttons**. When a track is playing, you can press **4 MENU** to return to the menu if you would like to end the track and select others. To cancel PBC playing, press **3 TITLE** button again.

### Note:

- \* This function is operated by using the remote control.
- \* **PBC** playing confirms to version 2.0 of VCD disc and SVCD disc only.

## Local Area



You can select EUROPE or USA to search the stations quickly by your current area, also, you can select FM ONLY to receive the FM stations only.

## Local




In this menu to search the LOCAL stations, when selected ON, the strong signal local stations can be received, when selected OFF, the weak signal out-of-town stations may be received.

## Goto FREQ




To select ON, you can use GOTO button on the remote control to select a station's frequency directly in radio mode.

## RT Scroll

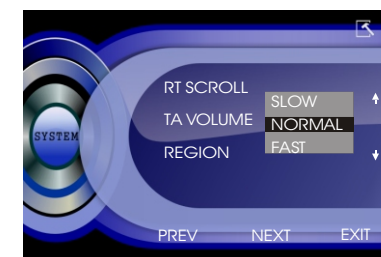


To select your desired speed, SLOW, NORMAL, FAST. The default settings is NORMAL.

## TA Volume

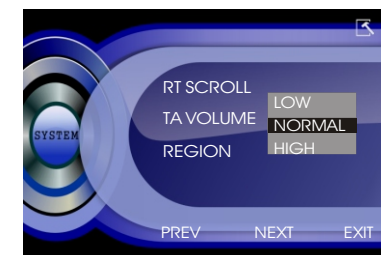

To select your desired volume, LOW, NORMAL, HIGH. The default setting is NORMAL.


## REGION

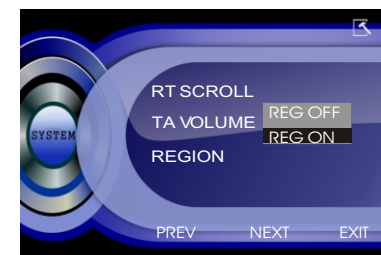

To set the AF searching region, the default setting is ON.



Press **NEXT** to display the menu follows, press **PREV** to display the previous one.

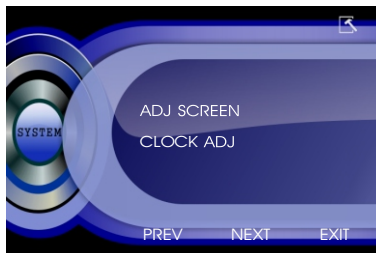

### Adjust Screen



 
Press **ADJ SCREEN** to display the above menu, there are a square button in the top left corner. Press the square button at place ①, then the button will move to place ②, press it at place ②, it will move to place ③, then place ④, press **SAVE** at last.

### Clock Adjust




Press **CLOCK ADJ** in the monitor to adjust the clock.

During **VCD** status, press **OSD** button the display shows:



 During **MP4** status, press **OSD** button the display shows:



**Note:**

- \* This function is operated by using the remote control.

### Setting the Playback Time

During DVD mode, press ② **GOTO** button to set the playing time, when the TFT display : **title/chapter/audio/subtitle/angle /title time/chapter time/repeat/time disp.** Press ⑦ [▲] [▼] to select the options, press **ENTER** to set the status. Then press **NUMBER BUTTONS** or ⑦ [▶] [◀] to set the current status.

During VCD mode, press ② **GOTO** button to set the playing time, when the TFT display : **track/disc time/track time/repeat /time disp.** Press ⑦ [▲] [▼] to select the options, press **ENTER** to set the status. Then press ③ **NUMBER BUTTONS** or ⑦ [▶] [◀] to set the current status.

During MP4 playback, first press ② **GOTO**, and monitor shows : **---**, press your desired track by using number buttons and press **ENTER** to set the status. Second press **GOTO** button, and the monitor shows: **--:--**, input your desired time, then press **ENTER**.

**Note:**

- \* This function is operated by using the remote control.
- \* Press ④ **CLEAR** to clear the mistake input.

### Changing audio language (Multi-audio)

DVDs can provide audio playback with different language. With DVDs featuring multi-audio recordings, you can press ⑥ **AUDIO** to switch between language and audio systems during playback.

Selection options switch as follows:

**AUDIO 1 — AUDIO 2 — AUDIO 3.....**

**Note:**

- \* This function is operated by using the remote control.
- \* This function only operates with DVDs featuring multi-audio recordings.
- \* The number in the "⑥" mark on a DVD's package indicates the number of recorded languages/audio systems.

### Changing the subtitle language (Multi-subtitle)

With DVDs featuring multi-subtitle recordings. You can press ⑤ **SUB-T** to switch between subtitle languages during playback. Selection options switch as follows:

**Subtitles 1 — Subtitles 2 — ..... — Subtitles OFF**

**Note:**

- \* This function is operated by using the remote control.
- \* The number in the "⑤" mark on a DVD's package indicates the number of recorded subtitle languages.

## Playing Tracks at Random

During DVD/VCD/MP4 playback, press **16 RDM** button on the remote control to play any track at random under the directory which you select. Press it again to return to normal playing.

### Note:

- \* Pressing **5 RDM** on the main unit also performs the same function.

## Repeat Playing

During DVD playback, press **15 RPT** on the remote control to perform replaying function as follows:



During VCD/MP4 playback, press **RPT** on the remote control to TRACK REPEAT.

### Note:

- \* Pressing **5 RPT** on the main unit also performs the same function.

## Skip backward/forward/F.F /F.REW the playback

Press **20** (**◀** or **▶**) on remote control to perform fast reward or fast forward. Each pressing will change as follow:

 


### Note:

- \* Pressing and holding **◀ / ▶** on the head unit also performs the same function.

## System Switch

During DVD/VCD mode, Press **11 P/N** on remote control to set the TV standard to PAL or NTSC or AUTO system.



### Note:

- \* The function can be operated by selecting the DVD MENU SETUP.

## Slow motion playback

During DVD mode, press **10** **⏮** to slow play. There are speeds as follows:



During VCD/MP4 mode, press **10** **⏮** to slow play. There are speeds as follows:

 


### Note:

- \* The function is only valid on remote control.

## Increase the size of picture

During DVD/VCD/MP4 mode, Press **9 ZOOM** to increase the picture in size. There are sizes as follow, Each pressing increases the size until the maximum size is reached.




### Note:

- \* The function is only valid on remote control.
- \* To remove the image by pressing **27** button.

## On Screen Display

 During DVD status, press **8 OSD** button the display shows:



## DVD/VCD/MP4 Setup

During DVD/VCD/MP4 playback, touch the screen the bottom shows the following menu:



Play/pause



Stop



Decrease volume level



Increase volume level



DVD setup menu



Mode selector

### Note:

- \* Press right corner repeatedly to play the next track (**▶▶** shows), press left corner to play the previous track (**◀◀** shows).

## DVD/VCD/MP4 Play

Insert a disc into the slot **14**, the unit will automatically switch on, if a disc is loaded, press **SOURCE** to start the playback. If the unit is in other menu, press DVD to switch to disc play.

### Note:

- \* Press **MODE** on the head unit to switch to DVD mode. When SD card and USB were inserted into, press this key again and again to switch among SD card, USB and disc.
- \* Press **MODE** in the monitor perform the same function.

## Selecting Tracks Fast

During DVD/MP4 playback, press **21** **◀◀** to play previous track, press **21** **▶▶** to play next track.

During VCD playback, first press **21** **◀◀** to return to the beginning of the current track, press **21** **◀◀** again within 3 seconds to play previous track, press **21** **▶▶** to play next track.

### Note:


- \* Pressing **7** **◀◀** / **▶▶** on the head unit or press left/right twice continuously in the monitor also perform the same function.

## Number Buttons

Press one of **23 Number Buttons(0~9)** to select a track, it will be played automatically.

### Note:

- \* Press this region and the screen shows the following menu: number keys appears, touch the number to select tracks. Touch the "X" to exit this menu.

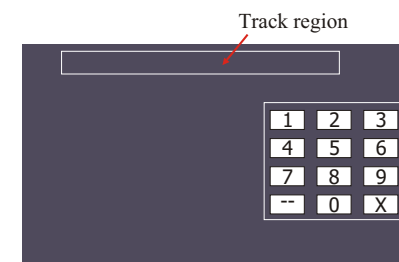

- \* Press **22 CLEAR** to clear the mistake input.

## Pause the Playback

During DVD/VCD/MP4 playback, press **17** **⏮** to switch between play and pause; During stop mode, press this button to resume playback mode.

### Note:

- \* Press **17** in the monitor or **17** on the head unit performs the same function.

## Stop the playback

During DVD/VCD playback, first press, **18** **■**, then press **27** or **17** on the remote control to replay; press **18** **■** twice to stop playing completely, then press **17** to return to the beginning of the current track. During MP4 playback, press **■** first, then press **17** to return to the beginning of the current track.

### Note:

- \* Press **18** in the monitor perform the same function.