

TABLE OF CONTENTS

INFORMATION TO THE USER	2
BEFORE YOU START	3
GETTING TO KNOW YOUR PSX36	4
BEFORE YOU START	5
BLUETOOTH OPERATION	6
STREAMING MUSIC	7
AUX INPUT	8
USB INPUT	9
REMOTE CONTROL	10
INSTALLATION	11
TROUBLESHOOTING	12
WIRE DIAGRAM	13
SPECIFICATIONS	13

SUPPORT

For the latest information about this product please visit www.planetaudio.com

TECH SUPPORT: 885-751-4854
www.planetaudio.com/customer-support

ENGLISH

Thank you for purchasing this

Planet Audio®

PSX36 All-Terrain Sound System

Please read through these instructions carefully so you will know how to operate your model properly.

After you have finished reading the instructions, keep this document in a safe place for future reference.

THIS PACKAGE CONTAINS

1- PSX36 All-Terrain Speaker System

1- Mounting Kit

1- Power Accessory Extension Adaptor

1- Remote control

1- User Manual

1- Warranty Card

INFORMATION TO THE USER

Bluetooth®

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks is under license. Other trademarks and trade names are those of their respective owners.

2

Planet Audio®

• Do not
 • others
 • In b
 immed
 Carter
 • Set
 withou
 • BE BE
 • Do n
 • Use

WAR

• Do n
 without
 be dan
 • Refe
 • The
 battery
 • Wire
 astring
 minim
 • The
 • The
 circui
 • Use
 • Wash
 clean
 "Don

• DON
 • DON
 • DON
 • DON

ENGLISH

BEFORE YOU START

IMPORTANT SAFETY PRECAUTIONS

Do not operate mobile equipment while driving a motorized vehicle - safe driving and safety consideration of should always be your highest priority.

Be aware you should be aware of smoke, strange noises or odor from this product, or any other abnormal signs, immediately turn off the power and consult your dealer or the nearest authorized **Planet Audio** Service Center. Using this product in this condition may result in permanent damage to the system.

Turn off your volume control at a low setting, then increase the sound until you can hear it comfortably without distortion, or ear discomfort.

BEFORE TO OBSERVE THE FOLLOWING GUIDELINES:

Turn up the volume so high that you can't hear what's around you.

Do not use the product for an extended period of time in a potentially hazardous situations.

INSTALLATION PRECAUTIONS

WARNING - Always consult a professional installer

Do not attempt to install or service this product by yourself. Installation or servicing of this product by persons without professional training and experience in electronic equipment and motorized vehicle accessories may be dangerous and could expose you to the risk of electric shock, injury or other hazards.

Only use repairs to a qualified **Planet Audio** Service Center

PSX36 can be powered from a vehicle cigarette lighter / auxiliary power port, or hard wired directly to the battery through an optional relay / accessory switch.

When wiring directly to the vehicles battery, be sure to disconnect the batteries negative terminal wire before any wiring procedures. It is suggested that an optional fuse and fuse holder (not included) with an am rating of 15 Amps be in line with the positive battery terminal.

Do not ground cable length should not exceed 15-inches (See wiring diagram)

PSX36 has a weather resistant design, it should not be submerged in or under water under any circumstances

Only the installation parts provided with the **PSX36**

Wash the car with a mild soap or detergent and lukewarm water using a clean sponge or a soft cloth. Rinse well with water.


3-Step - Very Important

1. Turn engine in hot sun or on very hot days.

2. Use abrasive or highly alkaline cleaners on the main body

3. Treat the main body with razor blades, or other sharp instruments

4. Treat use: gasoline, acetone or carbon tetrachloride



3

CAUTION!!

Using other mounting methods may void this warranty

GETTING TO KNOW YOUR PSX36

- A** Planet Audio PSX36
- 1** 3.5mm AUX-INPUT
- 2** CIGARETTE POWER CABLE ADAPTOR
- 3** LED POWER INDICATOR
- 4** CONTROL PANEL
- 5** USB JACK

ENGLISH

BEFORE YOU START

The diagram illustrates the initial setup. On the left, a cigarette lighter adaptor is shown with a cigarette lighter plug. A small rectangular device, the PSX36, is being inserted into the adaptor. This adaptor is labeled with a circled '2'. Below the adaptor is a circular control panel with various buttons (power, play/pause, stop, volume, etc.) and a small display. This panel is labeled with a circled '9'. To the right of the PSX36, there is a Bluetooth symbol and a signal wave. Further right, a smartphone is shown with a music note icon on its screen, indicating it is connected to the PSX36 via Bluetooth.

PAIRING & DISCOVERING A NEW BLUETOOTH CONNECTION

- 1) Power on the **PSX36** by plugging in the male cigarette lighter adaptor into a female cigarette lighter receptacle. 2
- 2) Press the button 9. The **PSX36** will automatically go in to pairing mode:

ANDROID users:

- a. Go into the **Settings Menu** of your device
- b. Enter the **Bluetooth Menu**
- c. **TURN ON Bluetooth** and press **SCAN**
- d. "**Planet Audio PSX36**" will now be displayed under **AVAILABLE DEVICES**
- e. If prompted, enter passcode: "**0000**"


IOS users:

- a. Go into the **Settings Menu** of your **IOS** device
- b. Enter the **Bluetooth Menu**
- c. **TURN ON Bluetooth**
- d. "**Planet Audio PSX36**" will now be displayed
- e. If prompted, enter passcode: "**0000**"

NOTE: You have 2 minutes before you must restart this procedure over again.

- 3) If **Planet Audio PSX36** is not seen, repeat the above steps to refresh the "Device List"

 
- 4) When the connection is successful, you are now ready to stream music from your favorite media player to the **PSX36**

 **Planet Audio®**

5


BLUETOOTH OPERATION

INSTANT

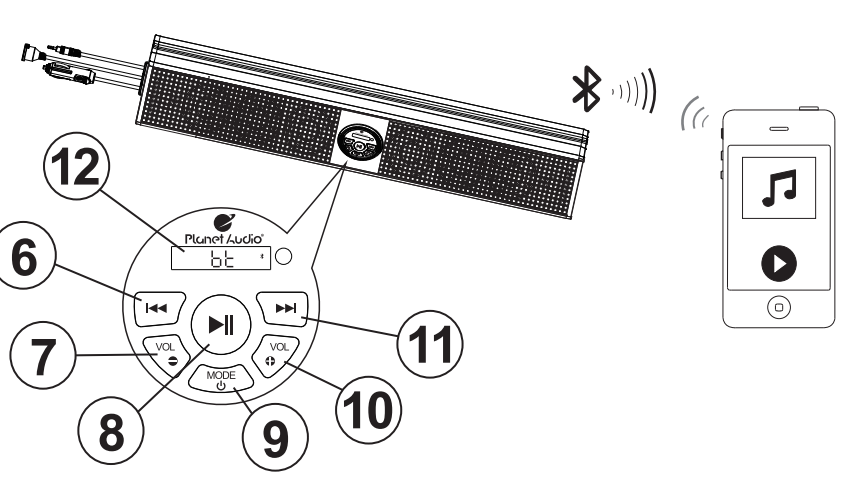


RECONNECTION

- 1) Power on the **PSX36** and your last paired **Bluetooth device**.
- 2) Press the button **(9)**. The unit will now automatically reconnect
- 3) If your device was previously paired with the **PSX36**, but it wasn't the last paired device:
 - a. Ensure no other **devices** are currently paired
 - b. Enter the **Bluetooth Menu** on your device being paired
 - c. "**Planet Audio PSX36**" will display under **AVAILABLE DEVICES**
 - d. Choose the "**Planet Audio PSX36**" to reconnect
- 4) If the device is out of range from the **PSX36**, it will disconnect automatically:
 - a. The **PSX36** will automatically reconnect to the device once back in range



Tip: To avoid battery exhaustion, be sure to occasionally run the vehicle's engine while using this product.
Using this product without running the engine can drain the battery.

6



STREAMING MUSIC

The diagram illustrates the setup for streaming music. A car stereo is shown with a Bluetooth receiver unit installed. The receiver has a circular control panel with buttons numbered 1 through 12. A smartphone is shown with a music icon and a play button, indicating it is connected to the receiver via Bluetooth.

MULTIFUNCTION CONTROLLER BLUETOOTH OPERATION

- 1) Press the **(8) PLAY/PAUSE** once to start playing music or press the **PLAY** button on your devices touchscreen
- 2) To skip songs or advance, press the **(11) NEXT TRACK** button
- 3) To select the previous song, press the **(6) PREVIOUS TRACK** button

VOLUME CONTROL

 
- 1) To raise the volume press the **(10) VOLUME UP** button or use your devices controls
- 2) To lower the volume press the **(7) VOLUME DOWN** button or use your devices controls

Tip: For maximum audio performance, ensure your device Bluetooth volume is set to a minimum 75% level before stowing

Planet Audio® **7**

AUX INPUT

ENGLISH

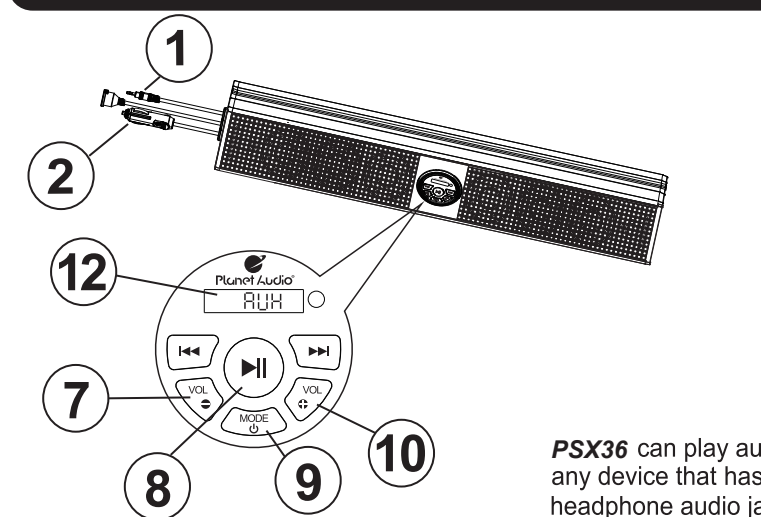


PSX36 can play audio from any device that has a 3.5mm headphone audio jack.

AUX INPUT OPERATION

- 1) Power on the **PSX36** by plugging in the male cigarette lighter adaptor into **(2)** a female cigarette lighter receptacle.
- 2) Press the button **(9)**. The **PSX36** will automatically go in to **AUX** mode:
- 3) Connect the integrated 3.5mm **AUX-IN** cable **(4)** to your device's headphone jack
- 4) Route the wire back to **PSX36**, and secure your device

VOLUME CONTROL

- 1) To raise the volume press the **(10) VOLUME UP** button or use your device's controls
- 2) To lower the volume press the **(7) VOLUME DOWN** button or use your device's controls



Tips: For maximum audio performance, ensure your device headphone volume is set to a minimum 75% level before storing

8

Planet Audio®

USB INPUT

USB IN OPERATION

- 1) Power on the **PSX36** by plugging in the male cigarette lighter adaptor into **(2)** a female cigarette lighter receptacle.
- 2) Press the button **(9)**. The **PSX36** will automatically go in to arbitrary pattern
- 3) Insert the USB Flash drive on **(5)** and play the music automatically.
- 4) Press the **(8) PLAY/PAUSE** once to start playing music or pause
- 5) To skip songs or advance, press the **(11) NEXT TRACK** button
- 6) To select the previous song, press the **(6) PREVIOUS TRACK** button
- 7) To raise the volume press the **(10) VOLUME UP** button or use your devices controls
- 8) To lower the volume press the **(7) VOLUME DOWN** button or use your devices controls

Tips:

USB can play music formats MP3 and WMA.
USB can provide 1A current.

9

REMOTE CONTROL

The diagram shows a black remote control with a silver tip. A circular inset provides a detailed view of the remote's controls, including a 'Planet Audio' logo, a 'RECEIVER' label, and buttons for 'M4', 'M5', 'M6', 'M7', 'M8', 'M9', 'M10', 'M11', 'M12', 'M13', 'M14', 'M15', 'M16', 'M17', 'M18', 'M19', 'M20', 'M21', 'M22', 'M23', 'M24', 'M25', 'M26', 'M27', 'M28', 'M29', 'M30', 'M31', 'M32', 'M33', 'M34', 'M35', 'M36', 'M37', 'M38', 'M39', 'M40', 'M41', 'M42', 'M43', 'M44', 'M45', 'M46', 'M47', 'M48', 'M49', 'M50', 'M51', 'M52', 'M53', 'M54', 'M55', 'M56', 'M57', 'M58', 'M59', 'M60', 'M61', 'M62', 'M63', 'M64', 'M65', 'M66', 'M67', 'M68', 'M69', 'M70', 'M71', 'M72', 'M73', 'M74', 'M75', 'M76', 'M77', 'M78', 'M79', 'M80', 'M81', 'M82', 'M83', 'M84', 'M85', 'M86', 'M87', 'M88', 'M89', 'M90', 'M91', 'M92', 'M93', 'M94', 'M95', 'M96', 'M97', 'M98', 'M99', 'M100'. A callout line points from the receiver window on the device to the remote control unit, which is labeled with the number 13.

REMOTE CONTROL OPERATION

- 1) Remote control receiver window (13)

The image shows a black remote control with a silver tip. The remote has a 'Planet Audio' logo at the bottom. The buttons are arranged in a grid: a row of four buttons (M4, M5, M6, M7), a row of four buttons (M8, M9, M10, M11), a row of four buttons (M12, M13, M14, M15), a row of four buttons (M16, M17, M18, M19), a row of four buttons (M20, M21, M22, M23), a row of four buttons (M24, M25, M26, M27), a row of four buttons (M28, M29, M30, M31), a row of four buttons (M32, M33, M34, M35), a row of four buttons (M36, M37, M38, M39), a row of four buttons (M40, M41, M42, M43), a row of four buttons (M44, M45, M46, M47), a row of four buttons (M48, M49, M50, M51), a row of four buttons (M52, M53, M54, M55), a row of four buttons (M56, M57, M58, M59), a row of four buttons (M60, M61, M62, M63), a row of four buttons (M64, M65, M66, M67), a row of four buttons (M68, M69, M70, M71), a row of four buttons (M72, M73, M74, M75), a row of four buttons (M76, M77, M78, M79), a row of four buttons (M80, M81, M82, M83), a row of four buttons (M84, M85, M86, M87), a row of four buttons (M88, M89, M90, M91), a row of four buttons (M92, M93, M94, M95), a row of four buttons (M96, M97, M98, M99), a row of four buttons (M100, M101, M102, M103).

The diagram shows a hand using a small screwdriver to pry open the battery compartment cover. The cover is labeled 'OPEN'.

 
REPLACEMENT BATTERY -

10

Planet Audio®


INSTALLATION

- 1) use the supplied adjustable bracket to secure to rails.
- 2) always recheck bracket before every ride

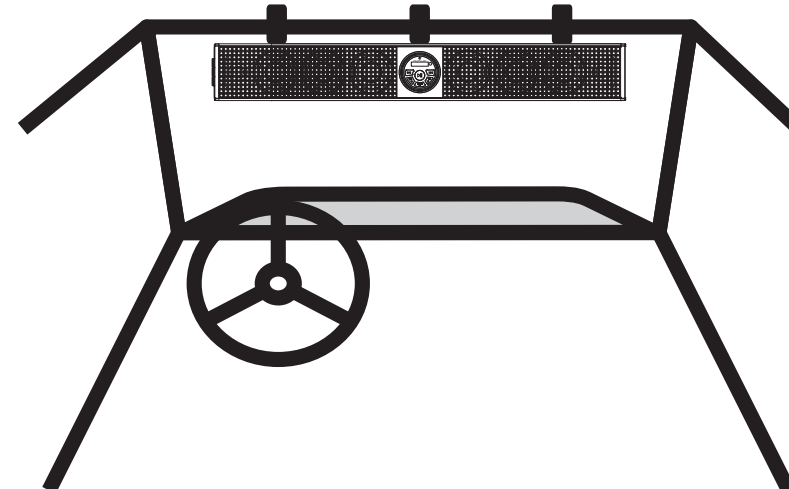

The diagram shows a black metal trolley with four legs and a large spoked wheel at the front. A rectangular subwoofer is mounted on the trolley's frame. It is held in place by a silver-colored adjustable bracket that is secured to the top horizontal rail of the frame with three black bolts. The subwoofer has a black mesh grille and a circular logo in the center.

CR2025

 Planet Audio®

1

TROUBLESHOOTING		
TROUBLE	CAUSE	SOLUTION
Unit will not turn on	The fuse is blown	Check / replace the fuse
	Main acc switch not engaged	Turn switch to on position
No sound is heard	Device volume is low / muted	Turn the volume level up
	Device is paused or muted	Check your device's volume status
Cannot pair Bluetooth	The Bluetooth function of the device is not enabled	Refer to the user manual of the device for how to enable the Bluetooth function
	The Bluetooth reception is poor	Move the device closer to the audio system or remove any obstacle between them
Unit has become unresponsive	Power glitch or interference	Disconnect power for 10 seconds to reset

SUPPORT

For the latest information about this product please visit www.planetaudio.com

TECH SUPPORT: 800-751-4854
www.planetaudio.com/customer-support

DIMENSIONS

1.65" (42mm)

9.81" (250mm)

1.5" (38mm)

